

AirFlo Manufacturing

3560 w/ Thor's Hammer™



PUSH to activate BLAST

MODE light
SOLID means PAUSE

MOTOR STATUS light
FLASH means MOTOR ERR
SOLID means PWR ERR

MODE switch

POWER switch

STATUS LED Blink Codes	
Number of Blinks	Condition
SOLID	Ignition Off
1	Jam (low voltage)
2	Jam (high current)
3	Overheat
4	Battery voltage low
5	Battery voltage high

Compatibility Chart			
Buyers Models			
Buyers		SnowEx	
ATVS15	TGSUV1B	375	11875
TGSUVPROA	TG01	575	Vee-Pro
TGS01A	TGS01B	1075	V-Maxx
TGS05	TGS05A		
TGS05B			

The AirFlo 3560 is also compatible with many other competitor models. Please check our full comparison chart.

AirFlo Manufacturing

3560 w/ Thor's Hammer™

Normal Operation – Startup

1. If unit is not in PAUSE MODE, cycle through RUN mode back to PAUSE.
2. Turn POWER switch ON.
3. Chose RUN mode
4. Set the SPEED DIAL to the desired spinner speed.
5. To enable the unit for first time run condition, press the BLAST BUTTON.
 - This is a safety feature. It also clears the spinner motor of debris.
 - The unit will BLAST until you release the BLAST BUTTON.

Normal Operation – Shutdown

1. Turn MODE SWITCH to PAUSE.
2. Turn POWER SWITCH to OFF to deactivate the unit.

At Any Time You May:

- Press the BLAST BUTTON for an extra BLAST of spinner power.
- Set the MODE SWITCH to PAUSE to temporarily turn off the spinner motor.
- Change the desired minimum speed setting using the following procedure:

Set Minimum Running Speed

1. Make sure MODE SWITCH is set to PAUSE.
2. Make sure the POWER SWITCH is set to ON.
3. Turn the SPEED DIAL to the desired minimum speed setting.
4. Press and release the BLAST BUTTON to lock in the desired minimum speed setting.
5. The PAUSE light will blink once to confirm the setting is locked in.

Helpful hint: Before setting the minimum running speed, run the unit as normal and vary the speed setting until the motor is just barely running. This should be your “level 1” speed setting.

The settings will remain programmed even if the power is removed.

